



XT1

NET	PIN
LN1	A1
LN2	A2

XT3

NET	PIN
+5V	A1
GND	A2

XT7

NET	PIN
LOUD SPEAKER	A1
GND	A2

XT4

NET	PIN
TMICROPHONE+	A1
TF_GND	A2

XT5

NET	PIN
TSPEAKER	A1
TF_GND	A2

XT6

NET	PIN
FMICROPHONE+	A1
HF_GND	A2

KD1	KD2	KD3	KD4
1	2	3	E1
4	5	6	E2
7	8	9	E3
*	0	#	MODE
REDIAL	STORE	AUTO	PAUSE
FLASH	RESET	SAY	CORR

XT8

PIN	NET
A1	LED2-
A2	LED2+
A3	KD3
A4	K1
A5	K2
A6	K3
A7	K4
A8	KD4
A9	K6
A10	KD2
A11	K5
A12	KD1
A13	LED1+
A14	LED1-

XT9

PIN	NET
A1	ALS_R#1
A2	ALS_SEG_C
A3	ALS_R#2
A4	ALS_SEG_H
A5	ALS_R#3
A6	ALS_SEG_A
A7	ALS_R#4
A8	ALS_SEG_E
A9	ALS_R#5
A10	ALS_SEG_D
A11	ALS_R#6
A12	ALS_SEG_G
A13	ALS_R#7
A14	ALS_SEG_B
A15	ALS_R#8
A16	ALS_SEG_F
A17	ALS_R#9